


SS16A2

**Universal 16 Amp Self Excited Automatic Voltage Regulator
With Droop and Power Factor Correction Inputs
Separate Power inputs for Auxiliary Windings
Used With Older Cat* SR4 Generators**

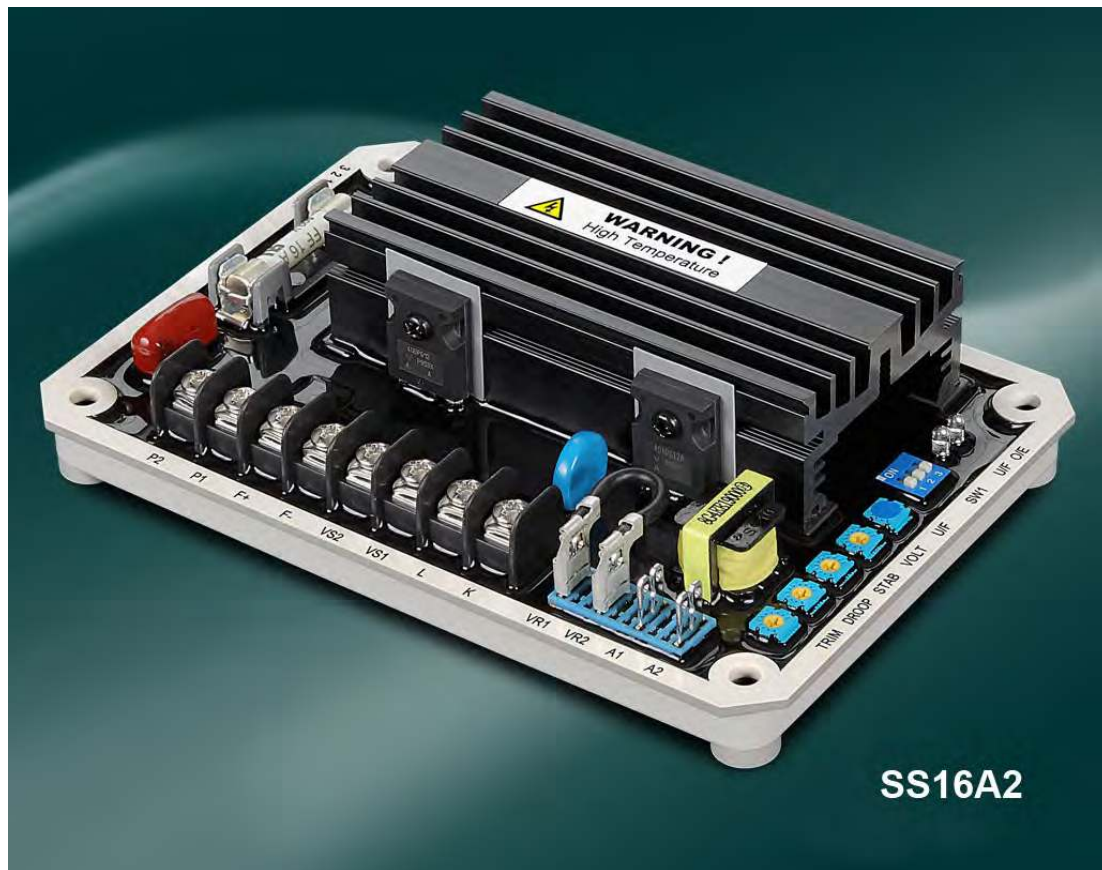

SS16A2

Operators Manual

**** For reference purpose only - this is not a Cat Regulator***


1. SPECIFICATION

Sensing Input	Voltage 170 to 510 VAC Single Phase 2 wires, Voltage is DIP Switch selectable	Over Excitation Protection	Max DCV 95% 20Sec
	Frequency 50/60 Hz DIP Switch selectable	Power Dissipation	Max. 3 Watt
Power Input	Voltage 60 ~ 300 VAC Single Phase 2 wires Shunt or Auxiliary Winding	Under Frequency Protection	50/60 Hz DIP SW selectable
Output	Voltage Max. 90 VDC @ 240 VAC Input		
	Current Continuous 16A Intermittent 20A for 10 sec		
	Resistance Min 4Ω	Soft Start Ramp Time	2 sec
Voltage Regulation	< ± 0.5% (with 4% engine governing)	Thermal Drift	
Voltage Build-up	Residual voltage at AVR terminal > 5 VAC		
Remote Voltage Adjustment	5% with 2K Ohms 1 Watt trimmer	Dimensions	41mm H * 156mm W* 106mm D
Load Current "CT" Compensation	1A or 5A Max. 7% @ PF 0.5 DIP Switch Selectable	Weight	
Analogue Voltage Input A1 & A2	±3VD Max. 10%		

The SS16A2 AVR is an update of the SS15A2 AVR. It is similar to the original SS15A2 in power and voltage sensing capabilities but with new enhanced paralleling functions; the user can now select the CT inputs either 1 & 5 Amp or use new A1 & A2 analogue signal inputs terminals for use with PLC paralleling controls. It has new over-voltage excitation safety circuits to prevent damage caused by the accidental detachment of the sensing wires or irregularities on the generator's excitation circuits.

Dimension
For dimension and mounting, refer to Figure 1. The protection fuse capacity is 16A / 250V slow blow type.

Connection terminal specification
6.35mm (1/4 inch) ("Fast-On" terminals.) with 4mm crimping terminal



ATTENTION!!

Use an average-reading type voltmeter for voltage readings. Do not use Meggers and high-potential test equipment that could damage the AVR.

Secure all wiring connection. Do not install AVR at location with too much vibration to avoid loose connections. Do not touch the heat sink while operating.


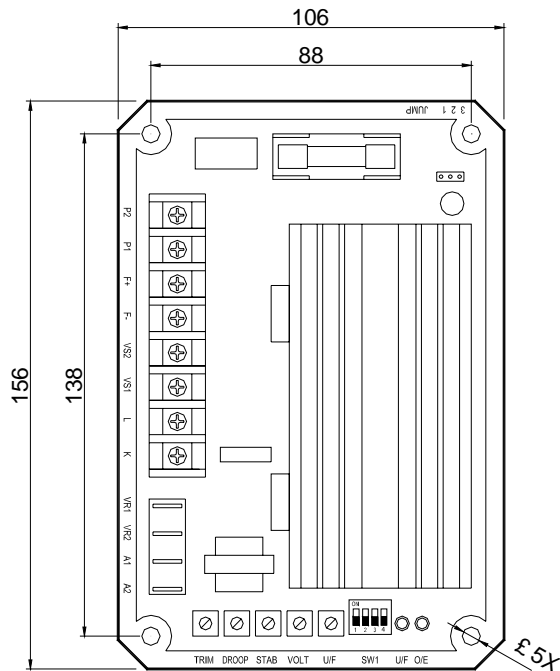


Figure 1 Outline Drawing Unit : mm

2. Terminal Description

- 2.1 P1 - P2: Power Input Terminals from 60 to 300Vac 50/60Hz -16A rated
- 2.2 F+ F- : Maximum Output current 16A
- 2.3 VS1 -VS2 : Voltage sensing input terminals, Volts selected using DIP SW1 for 220V or 400V
- 2.4 S1 - S2:Load Current Compensation (droop), CT secondary current input selected by using DIP SW2 1A or 5A (if droop not used leave terminals open).
- 2.5 VR1 - VR2 : External Voltage trim connection, 2K Ohms 1-watt trimmer for 5% voltage adjustment. Keep terminals shorted when not in use.
- 2.6 A1 -A2 : Analogue Voltage Input terminals used for Power Factor correction from a external PLC- The PLC controls provides a DC voltage signal to adjust the generator voltage. Max. Adjustment range is ± 5 VDC. Keep terminals open when not used, adjust TRIM to change bias volts.
- 2.7 DIP Switch 1 to 3
- SW1 : OFF sensing voltage from VS1 to VS2 (170 to 260VAC)
ON sensing voltage from VS1 to VS2 (340 to 510VAC)
- SW2 : OFF use 1A CT
ON use 5A CT
- SW3 : OFF 60Hz
ON 50Hz
- SW4 : OFF Over excitation protection enabled
ON Over excitation protection disabled

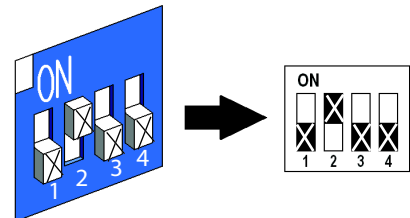

- 2.8 LED Indicator
- U/F : Under Frequency Indicator
- O/E : Over Excitation Indicator

3. Adjustment and Setting

- 3.1 TRIM** works together with a bias voltage applied to terminals A1 and A2. This signal is supplied by an external Power Factor Paralleling PLC. Use the TRIM potentiometer to adjust the DC voltage input that controls the level of the generator's output voltage. When set counter-clockwise the control level is zero, and if moved clockwise the maximum control range is 10%. The signal connected to A1 and A2 can be unipolar (0, +) or bipolar (+, -). Check with the manufacture of the Paralleling control PLC.
- 3.2 DROOP:** Select switch S2 pending on the secondary current of the CT that you are using. Voltage droop works when the CT and the AVR senses that the output of the generator voltage and current waveforms are out of synch and the AVR droops the output voltage of the generator to correct it.
- 3.3 STAB:** If the generator output voltage oscillate, adjusting the STAB potentiometer will stabilize the output voltage, over adjustment will result in high voltage variation when load is applied. Use an analog type multimeter when making this adjustment. Connect the meter to terminals F+ and F- and slowly adjust STAB potentiometer to the point when the pointer stops moving.

3.4 VOLT : Move to set the generator output voltage. Set DIP Switch 1 to the generator working voltage.

Set SW1 to **OFF** (220V) for use from 170 to 260V

Set SW1 is **ON** (400V) for use from 340 to 510V

When using an external VR set it to the central position and adjust the AVR VOLT trim to the rated voltage.

Note : If the external VR is not used, short terminal VR1 and VR2.

3.5 U/F : Under Frequency protection setting.

At 60Hz U/F factory set at 55Hz

At 50Hz U/F factory set at 45Hz

To adjust the U/F setting, select the correct system frequency, start engine and adjust engine speed to the required U/F frequency (for example 55Hz or 45Hz), slowly adjust U/F potentiometer until the U/F red LED turns ON, returning the engine speed to normal turns the LED off.

Function of the Under Frequency trim pot:

3.5.1 During start up or shutdown, the engine speed changes going over or under its rated RPM/(Hz).

This AVR has an Under Frequency circuit to protect the AVR and exciter; you do not need to disconnect the AVR when idling the engine.

3.5.2 If load is higher than the generator's capacity, the Under Frequency activates, reducing the generator's voltage preventing generator overload.

3.6 Over Excitation Protection: Switch 4

3.6.1 This AVR has over Excitation Protection preventing the generator from working under unusually high excitation. Excitation Protection includes generator overload, accident removal of sensing wires, and incorrect voltage setting. When problems occur, the AVR will gradually shutdown the excitation voltage to the minimum residual voltage. If the O/E LED turns ON and stays ON, you need to reset the AVR by shutting the engine for 10 seconds. When working the generator in parallel this protection is not required,

4. Notice of Use

4.1 Installation Notice: (refer to Figure 2 and 4)

4.1.1 Only a trained professional can install, calibrate and inspect this AVR

4.1.2 Install this AVR inside the generator enclosure away from moisture, corrosion and from any easy to reach area.

4.2 Generator Operation Notice:

4.2.1 During operation, the temperature on the surface of the AVR can reach higher than 60°C / 140°F

4.2.2 "DANGER" When the AVR is working never touch or ground the heat sink on the AVR. The AVR heat sink is an electrically live terminal.



A warning sticker is in place on top of the heat sink.

5. Field Flashing

When operating this AVR for the first time, the polarity of the residual magnetism may be reversed or too weak to achieve the necessary build-up on the regulator. If reversing the field connections does not induce build-up, and the residual voltage is less than 5Vac, shut down the Prime-mover and proceed with the following steps:

- 5.1 Stop the generator and disconnect the field wires (F+ and F-), apply a DC Voltage using a batteries positive terminal to F+ and the negative terminal to F-, using a current-limiting resistor of 3~5 ohms 20 watt.
- 5.2 Allow approximately 3 seconds before removing the battery.
- 5.3 Disconnect the AVR AC power input terminals and restart the generator, re-measure the residual voltage. If this voltage is greater than 5VAC, reconnect voltage regulator, and voltage build-up should be successful. If measured less than 5VAC, repeat steps 5.1 and 5.2.
- 5.4 If repeating steps 5.1 and 5.2 does not result in generator voltage build-up, and residual is greater than 5VAC, replace with a new voltage regulator

Warning: Over field, flashing could damage the AVR or generator exciter.

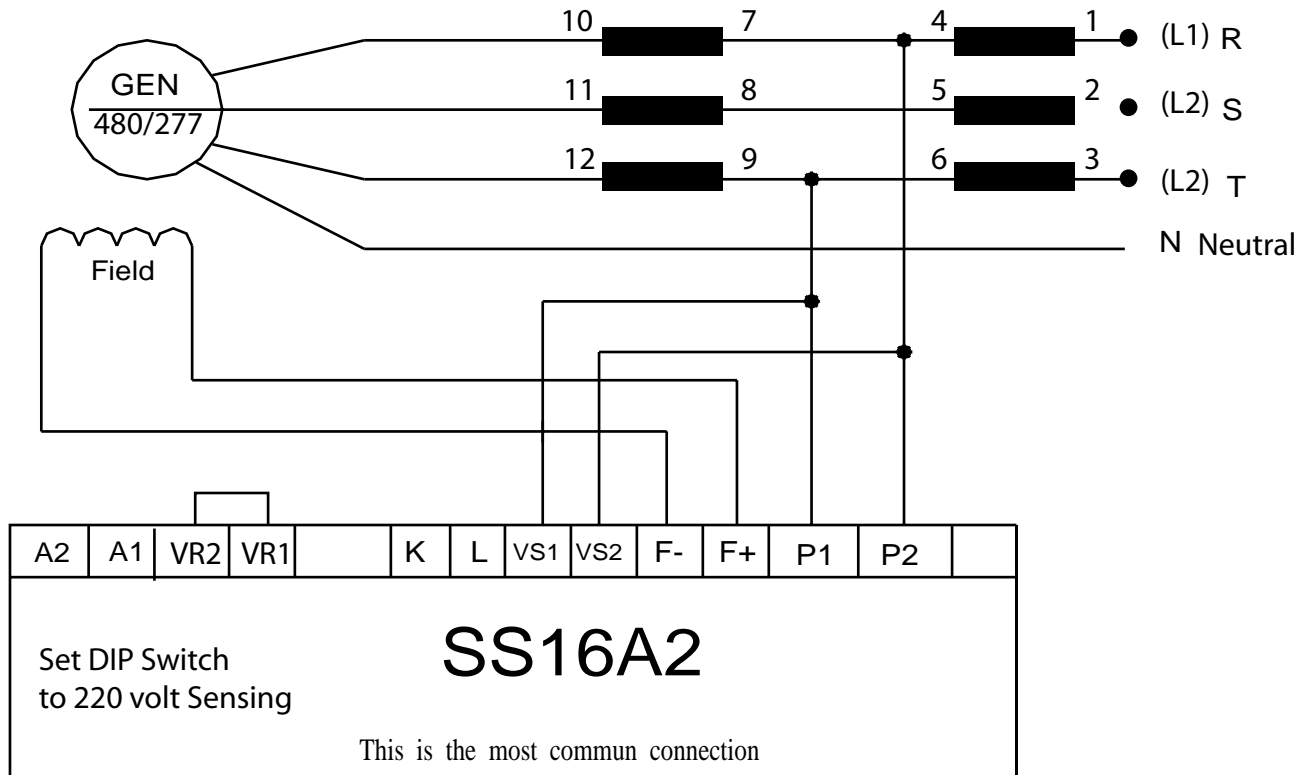


Figure 2 220V Connection


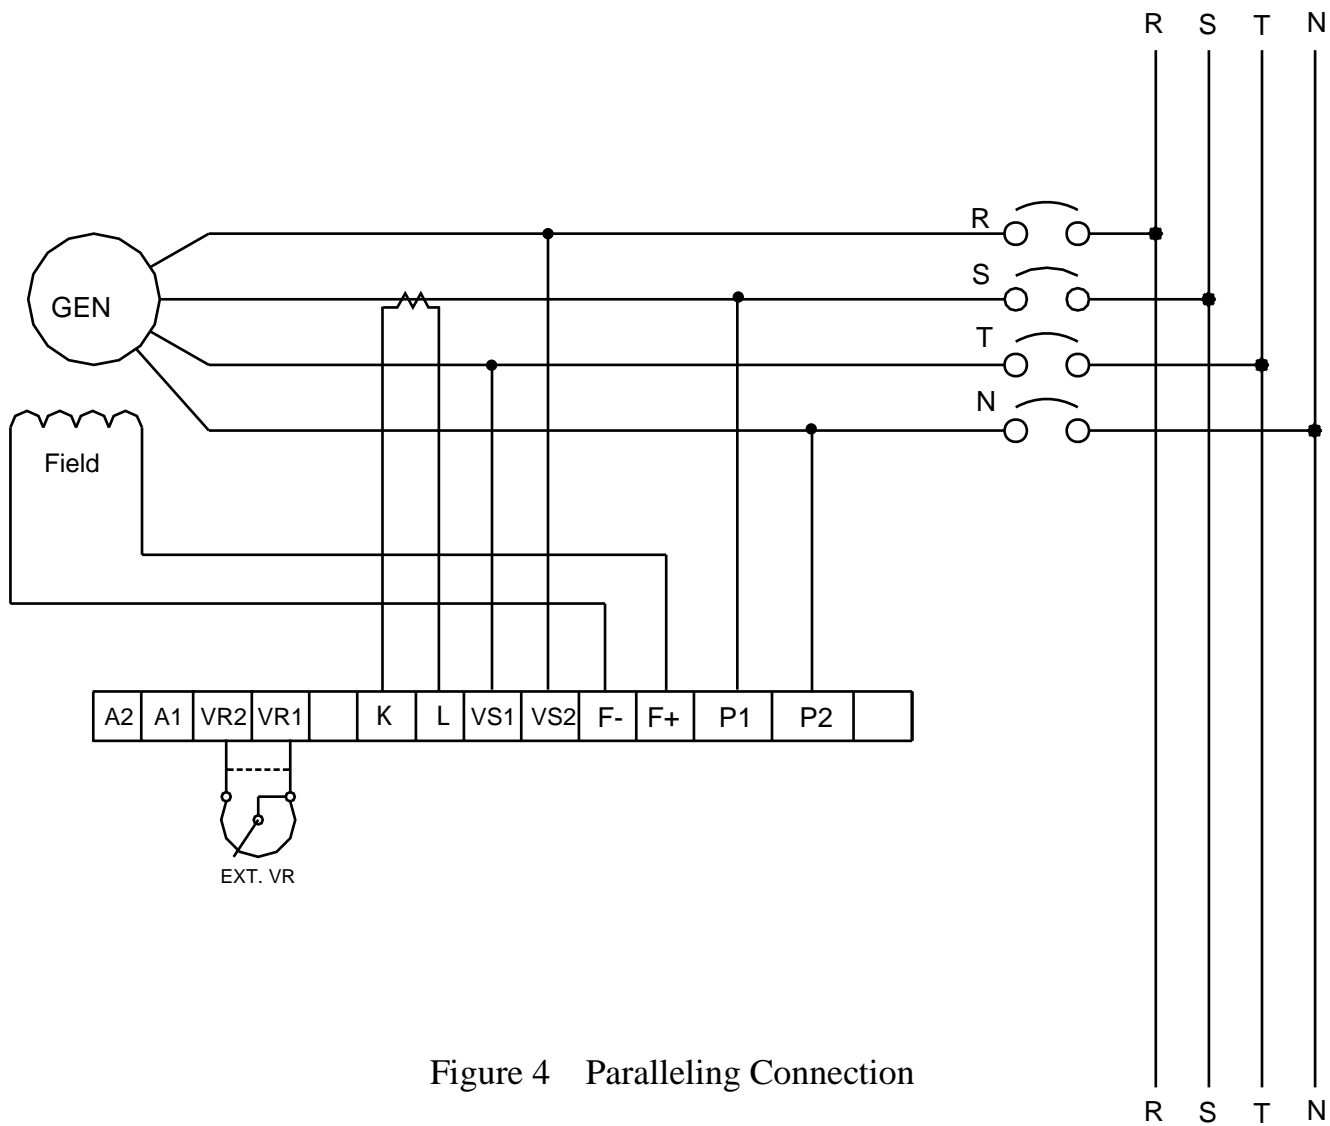


Figure 4 Paralleling Connection

6. TROUBLE SHOOTING


SYMPTOM	CAUSE	CORRECTION
Voltage does not build up	Residual voltage below 5VAC	Reference from 5.1 and 5.2
	F+, F- polarity reversed	F+ and F- reverse the connection
	F+, F-, P1, P2, VS1, VS2 not connected	Reference from Figure 2 and 3 connection
	Burnt fuse	Change fuse 16A 250V
	Ext. Switch(Breaker) not turned on	Switch on (ON)
	Engine RPM under speed	Increase engine speed / frequency above 25HZ

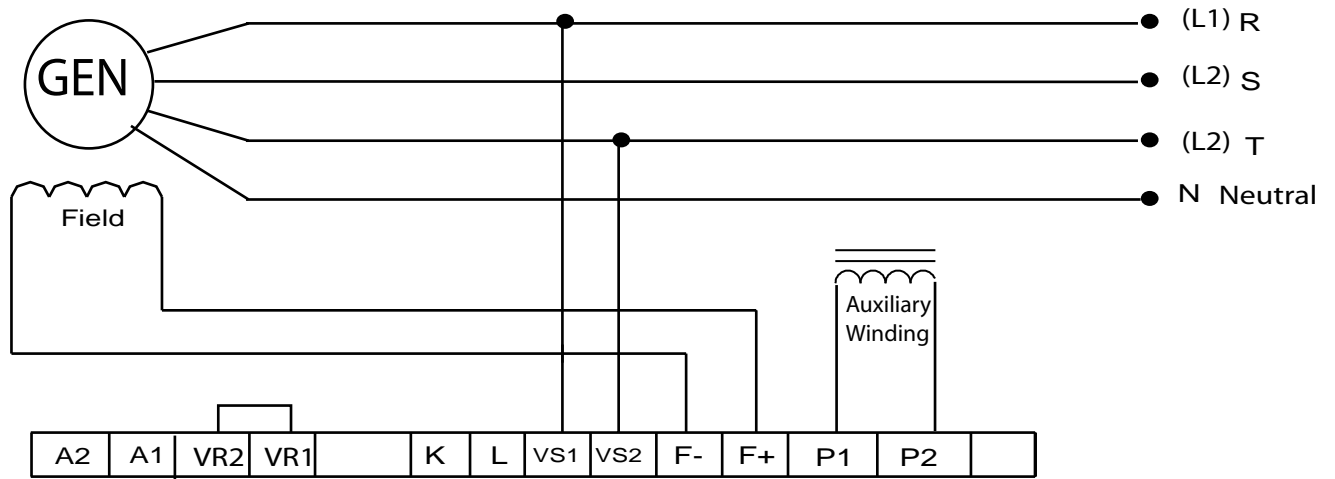

Set DIP switch
to sensing voltage

SS16A2

Using the SS16A2 with a Auxiliary Power winding

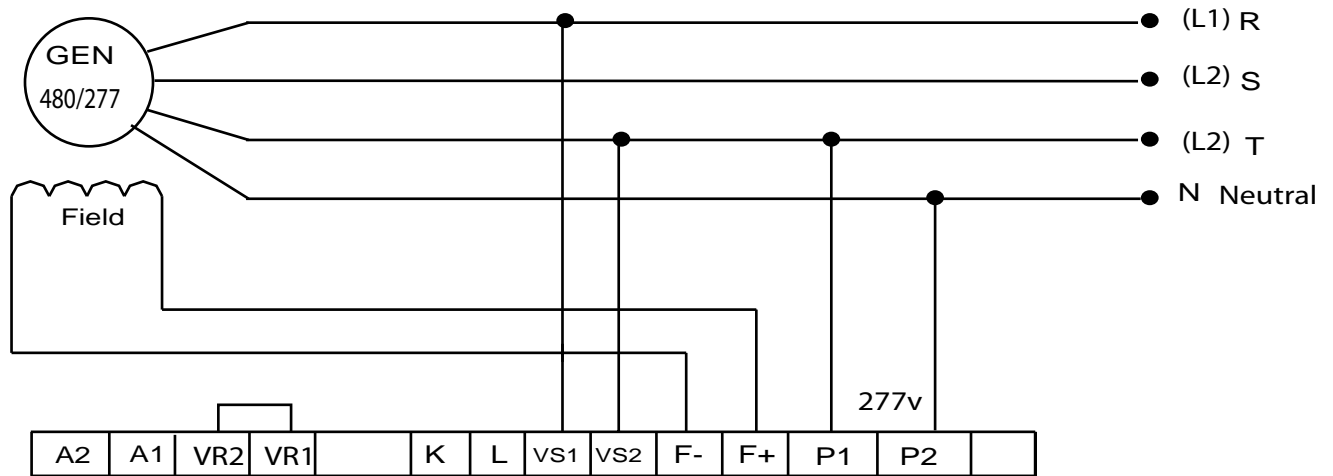

Set DIP switch
to 480-380 sensing

SS16A2

Figure 3 380/480V Connection

Output voltage Low	Poor adjustment is made	Read start procedure carefully and adjust again
	U/F protection activated	Increase generator speed
	U/F activated / Incorrect voltage selection	Read user's manual to select correct voltage
Output voltage High	Poor adjustment is made	Read start procedure carefully and adjust again
	Incorrect voltage selection	Read user's manual to select correct voltage
Output voltage Unstable	Poor adjustment is made	Read start procedure carefully and adjust again
	Field voltage requirement lower the range of regulator	Inquire our distributor to solve

P.S. Use the factory supplied fuse only




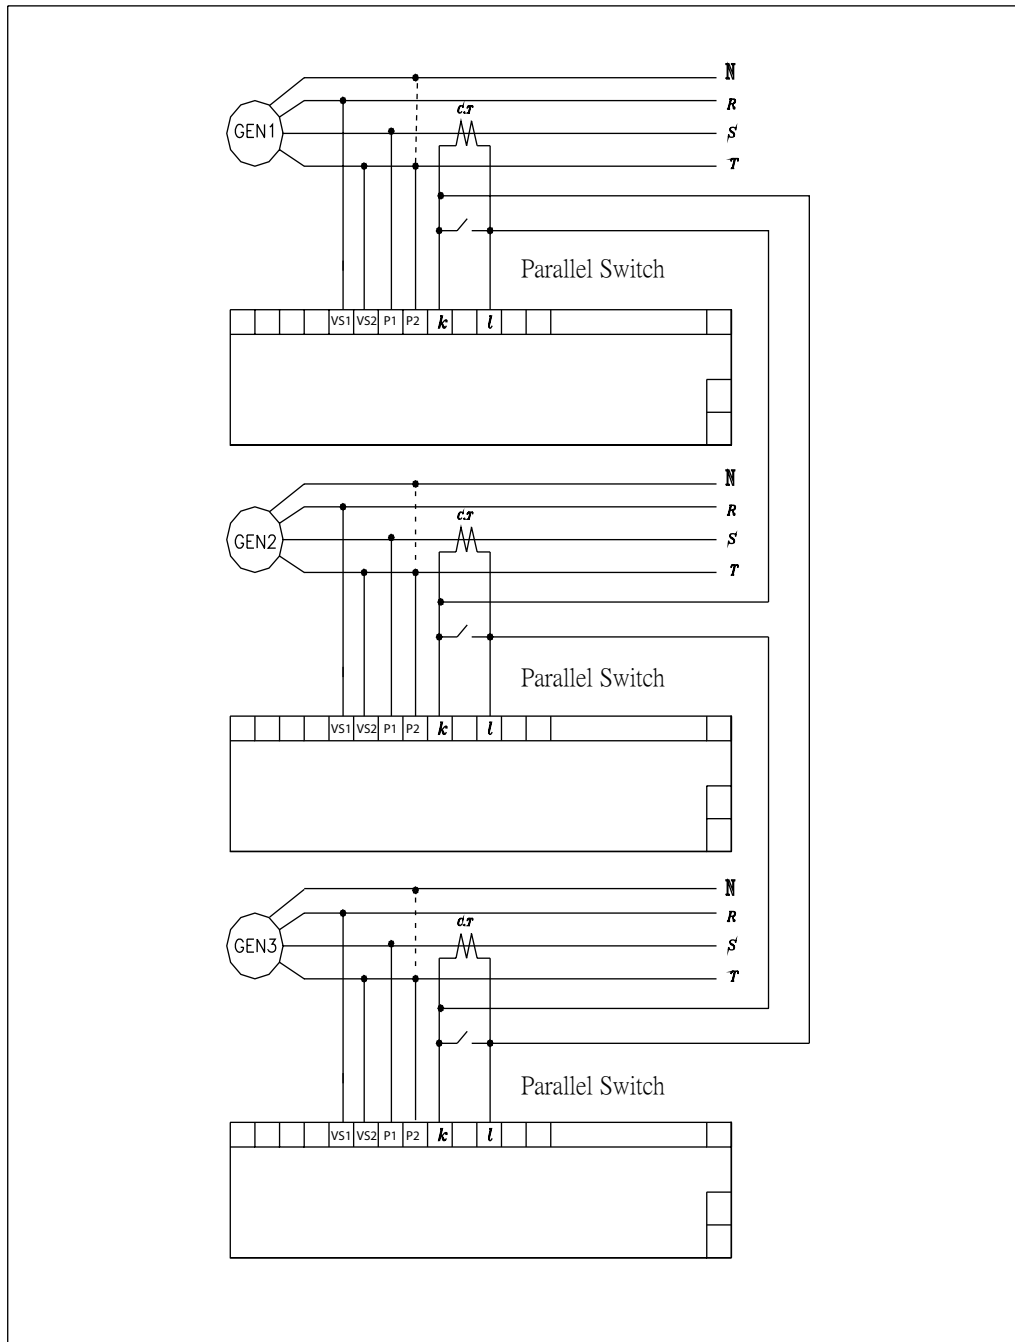


Figure 5 Current Compensation paralleling connection

NOTE!!

- (1) connect AVR as shown in Figure 5 when paralleling three generators or more.
- (2) The polarity of the CT is shown in Figure 5

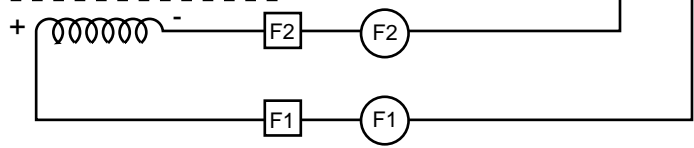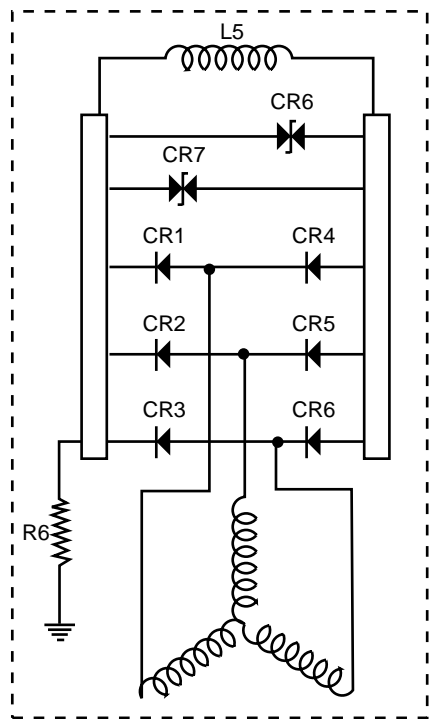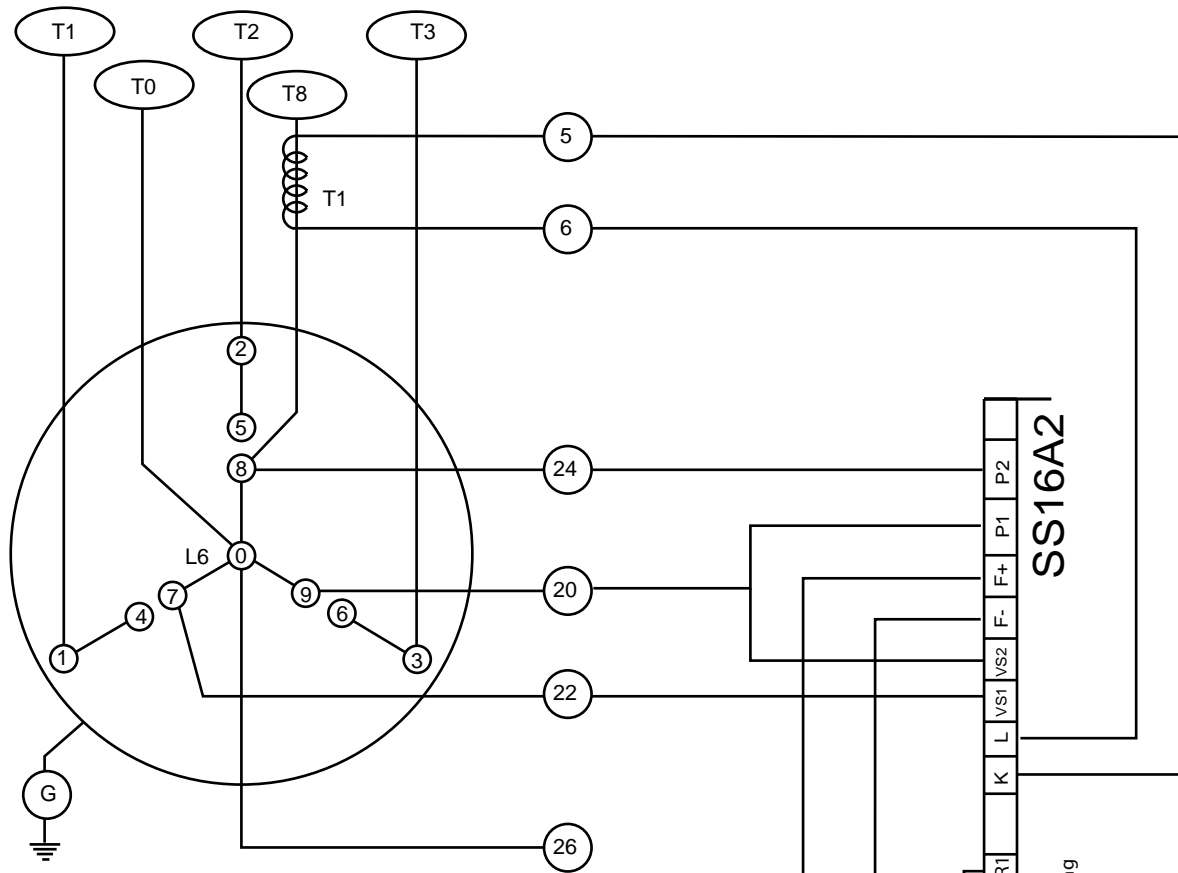

Using a SS16A2
McPherson AVR on
any SR4 Caterpillar
Generator